

CAR-MON DOWN DROPS

INSTALL RISER DUCT FROM CEILING
DUCT AND SECURE TO WALL OR COLUMN.
CONNECT MATING FLANGE TO RISER DUCT

INSTALL DOWN DROP TO MATING
FLANGE, USING GASKET SUPPLIED
IN BETWEEN FLANGES.

DUAL DOWN
DROP HAVE
CONNECTIONS FOR
2 HOSES. IF ONLY 1
HOSE IS CONNECTED,
DAMPER THE OTHER DROP

BEFORE USE, MAKE SURE
DAMPER IS OPEN AND FAN IS
RUNNING BEFORE CONNECTING
ADAPTER TO VEHICLE. NEVER
CONNECT ADAPTER TO RUNNING
VEHICLE.

AFTER SERVICING VEHICLE
MAKE SURE TO KEEP THE FAN ON
UNTIL THE HOSE AND ADAPTER ARE
COOLED.

