


MOTOR CHANGE OUT ON DUST COLLECTOR

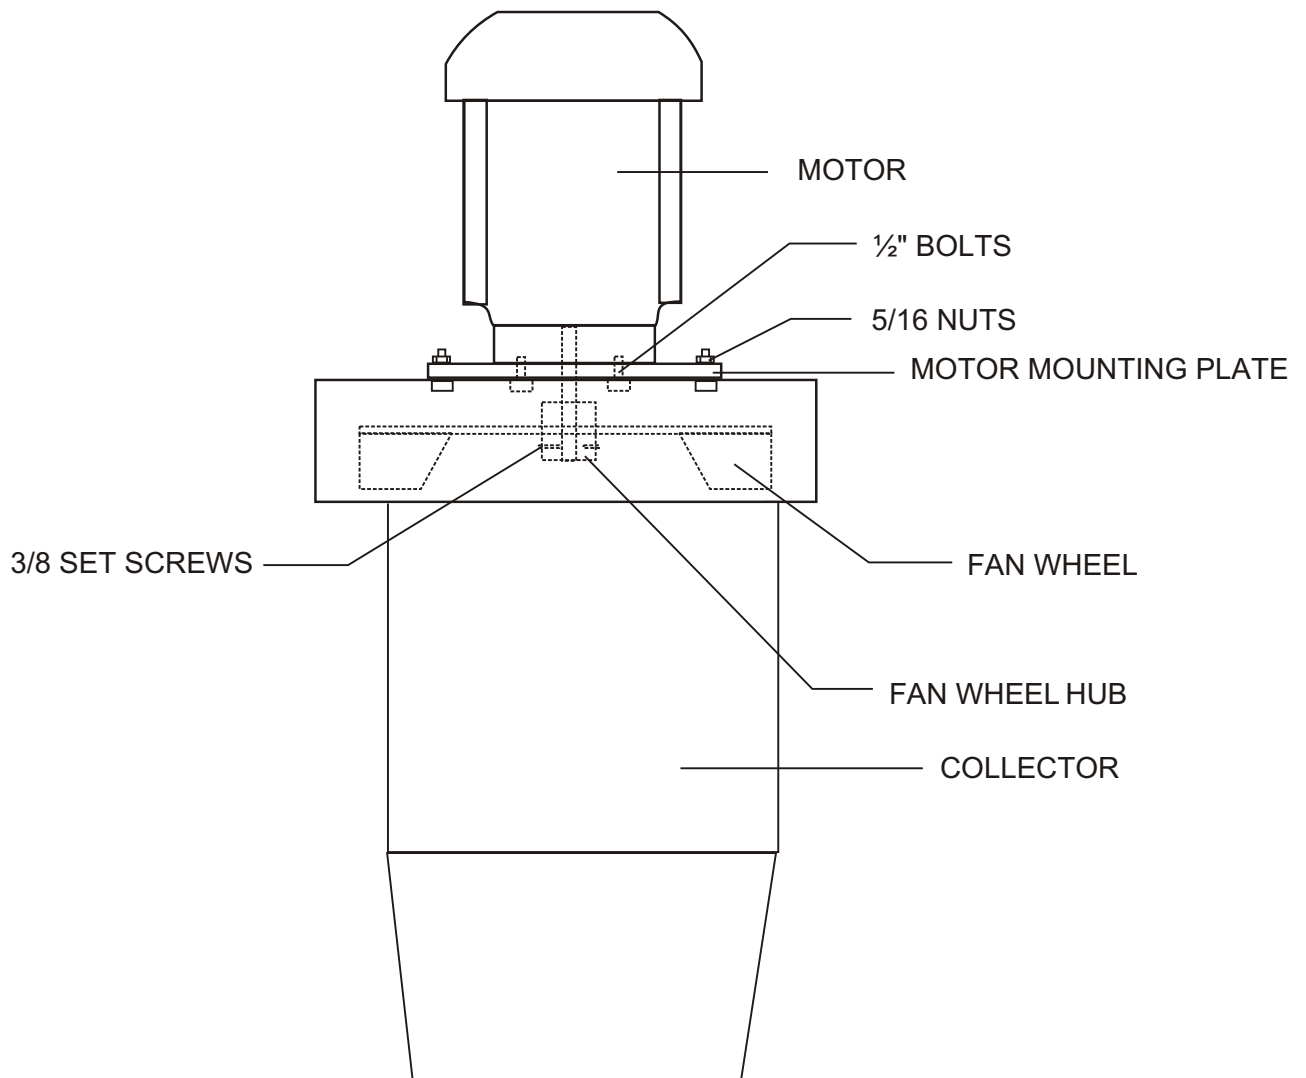

REMOVING MOTOR FROM DUST COLLECTOR FOR CHANGEOUT

1. Remove 8 5/16" nuts from top of motor mounting plate. The motor will come out with the motor mounting plate and fan wheel attached.
2. Remove fan wheel. A. Loosen the 2 3/8" set screws on the fan wheel hub. B. Fan wheel should slide off the shaft.
3. Remove motor mounting plate from motor and remove 4 1/2" bolts.
4. Reverse procedure when installing new motor.