

## CAR-MON POSITIONING POLE




The positioning pole is adjustable. To adjust the length, use the twist lock to unlock and lock the pole to the desired length.




POSITIONING KNOB: Used for positioning the adapter on to the exhaust pipe.

PULL DOWN KNOB: Used to pull the adapter down from the storage position.

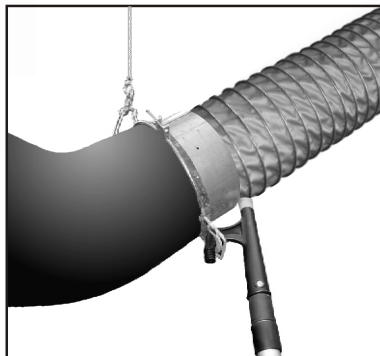

The positioning pole pull-down knob is inserted in the hole in the lifting ring on the EPDM adapter. The adapter is usually attached to the cable from the retractor or balancer. Pull the adapter assembly down far enough to fit over the exhaust pipe. After use, pull down the adapter enough to dis-engage the retraction of the retractor or balancer unit. Check operation instructions that were provided with the retractor mechanism.

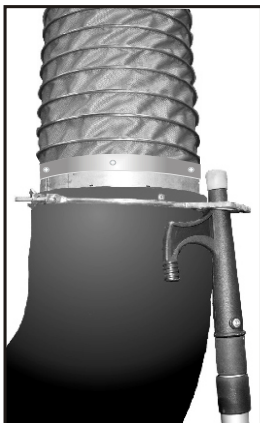

After pulling the hose assembly down, insert the positioning part of the pole into the hole on the lifting ring as shown on left, and position the adapter over the diesel stack as shown on right.

