



**CAPACITOR
WARNING! DISCHARGE
CAPACITOR BEFORE
REMOVING WIRES!**



MOTOR AND GEAR BOX DETAIL

1. Input power connection
2. Cable (not shown) to optional hanging pendant control
3. Capacitor
4. Reversing contactor
5. Motor and gear box assembly
6. Limit switch assembly (Controls length of up/down movement of tubing assembly) See next page for detail.
7. Lovejoy coupler assembly

MICRO SWITCH ASSEMBLY PARTS DETAIL

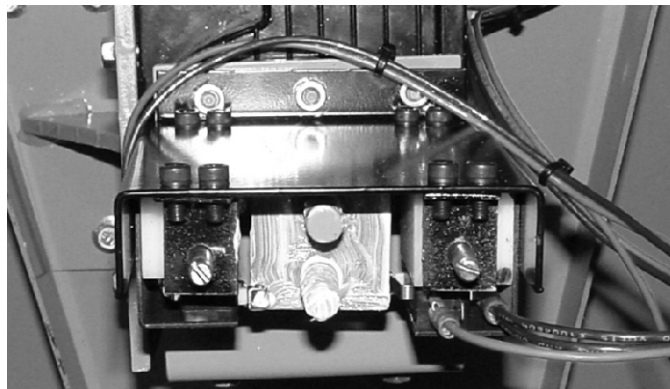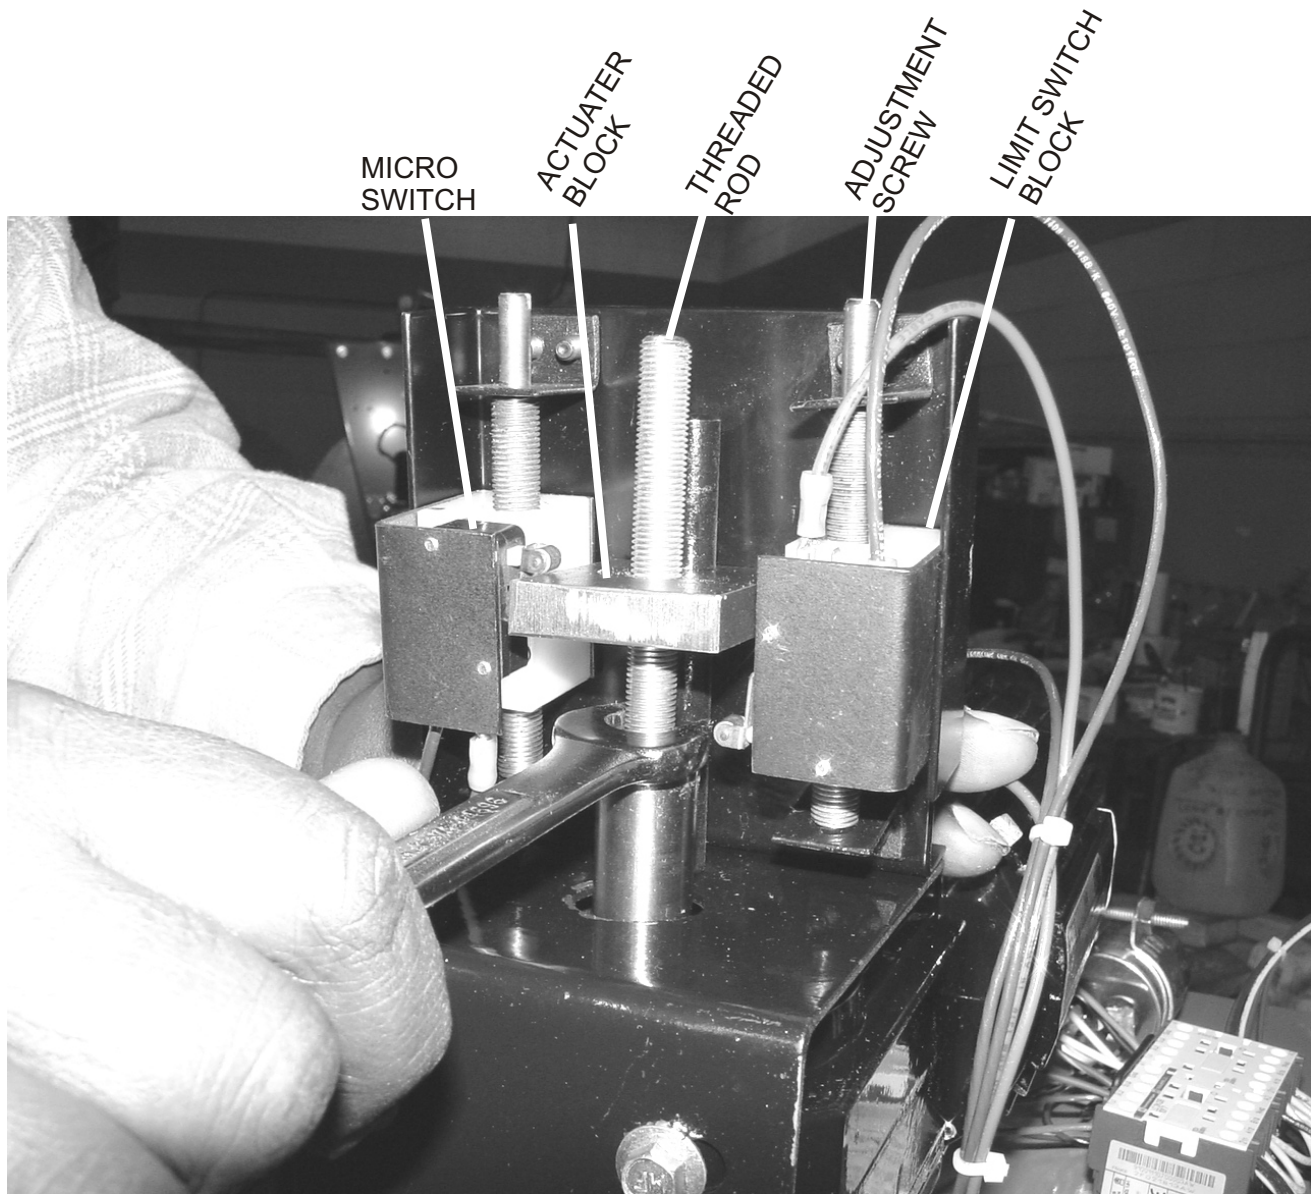

ASSEMBLY COMPLETE