



INSTALLATION - OPERATION - MAINTENANCE RCT ADAPTER MAINTENANCE

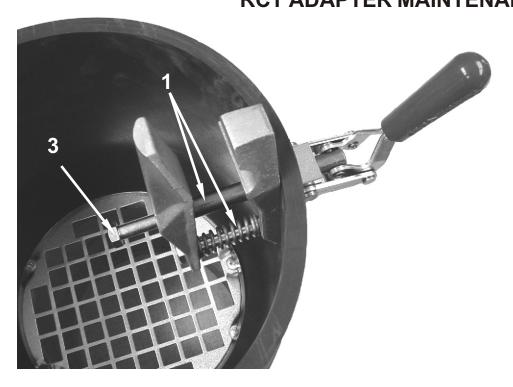

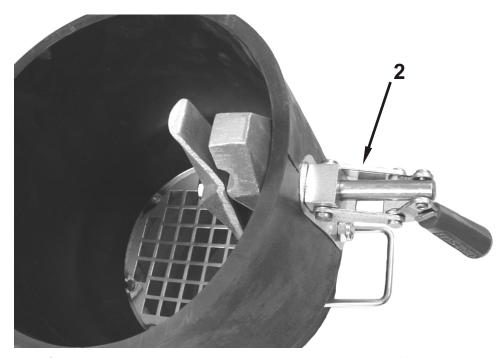

- #1 The piston rod & spring must be cleaned and lubricated with WD-40 on a monthly basis for smooth operation of clamp.
- #2 The outside handle area should also be cleaned and lubricated on a monthly basis.
- #3 The bolt that is threaded into clamp piston can be adjusted to allow for a thicker or thinner tailpipe.