


**Series WXL Fume Capture** Installation – Operation – Maintenance

WXL series arm comes assembled complete from factory. Check packaging and arm for any visible damage. If noticed contact transportation company and file report.

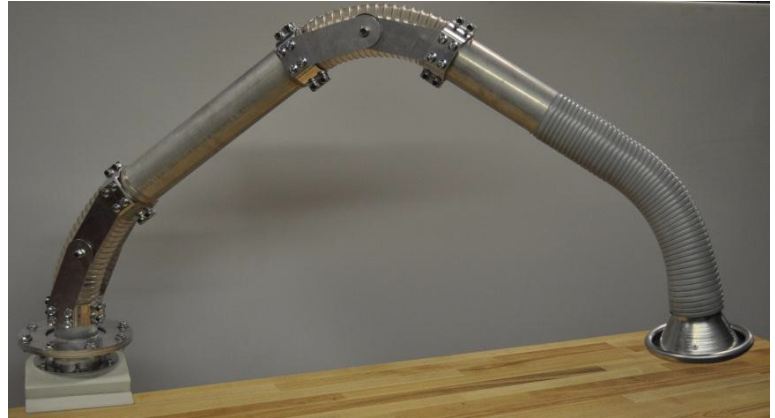

**Installation and Operation**

The WXL Series Arm has a flanged swivel allowing for multiple attachment options. The most common configuration is a hanging position shown in the above left photo. It can also table mount or inverted. If platform is provided use the (6) 1/4-20 bolts and nuts for securing to the common hole pattern. As stated above, arm ships assembled and factory tensioned. For additional adjustment at the joints refer to illustrations below.

1. There are two joints that can be adjusted; the back section closest to the swivel and the middle section of the arm. Each joint is connected with a 3/8-16 button head cap screw and a 3/8-16 Nylock bolt. Spring washers are used for tension between nut and brackets.
2. To tighten, use a 7/32 Allan wrench on the button head cap screw and a 9/16" ratchet or wrench on the Nylock nut. Rotate wrench to tighten or loosen. Small rotations will make considerable adjustment.
3. If flexible hose at receptor or arm duct connections becomes loose, tighten offset bands.

