


INSTALLATION OF OPTIONAL REFUSE CLEAN-OUT PLENUM

It is possible for moisture to collect in some underfloor systems, either by condensation or from wash-down of the floor. It is then advisable to use the optional refuse clean-out plenum installed in the riser duct to the fan. Water can be pumped out by access to the plenum door. See Car-Mon submittal 98-U4 for complete details. When installing plenum in duct, make sure safety screen is at top of unit.

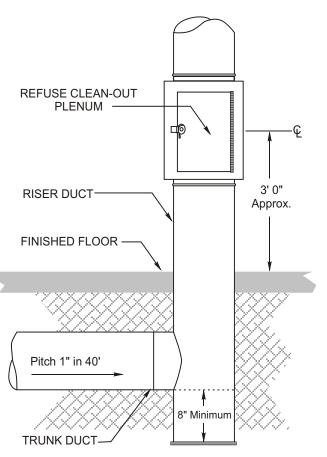

CAR-MON PRODUCTS, INC. 1225 Davis Road, Elgin, IL 60123 Phone (847) 695-9000 Web Site: www.car-mon.com e-mail: info@car-mon.com